


Replacement parts

Keep this manual for ordering replacement parts

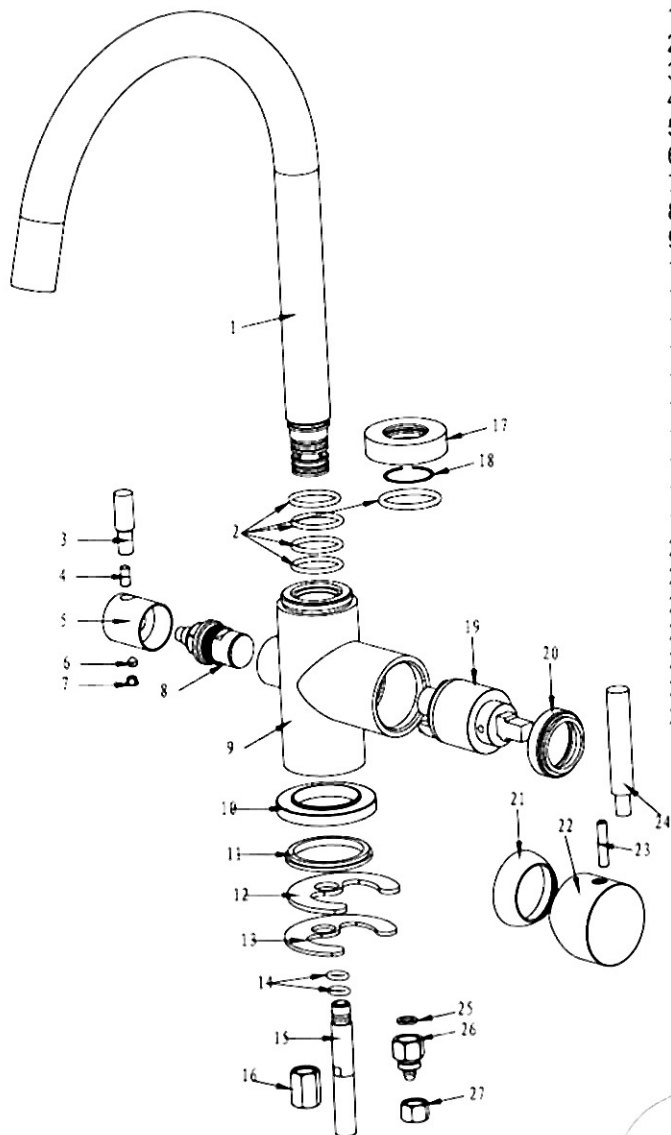

- | NO | NAME |
|-----|------------------------|
| 1. | Spout assembly |
| 2. | O-ring |
| 3. | Handle knob |
| 4. | Screw |
| 5. | Handle |
| 6. | Locking screw |
| 7. | Handle plugs |
| 8. | Cartridge |
| 9. | Faucet body |
| 10. | Index |
| 11. | Rubber pad |
| 12. | Rubber pad |
| 13. | Stainless steel gasket |
| 14. | O-ring |
| 15. | Inlet pipe |
| 16. | Nut |
| 17. | Copper sleeve |
| 18. | Gasket |
| 19. | Cartridge |
| 20. | Cartridge platen |
| 21. | Head cover |
| 22. | Handle body |
| 23. | Screw |
| 24. | Handle knob |
| 25. | Flat washers |
| 26. | Flat washers |
| 27. | Locking nut |